





Zonetech Firmware Update Instructions

To update the firmware on your Zonetech:


1. Power on Zonetech and connect a Cat 5e cable from the **Computer Ethernet** port on Zonetech to an Ethernet router/switch that has a DHCP server running.
2. Press the **Info** knob on the front panel of Zonetech until the **Wired Network Setting** is displayed.

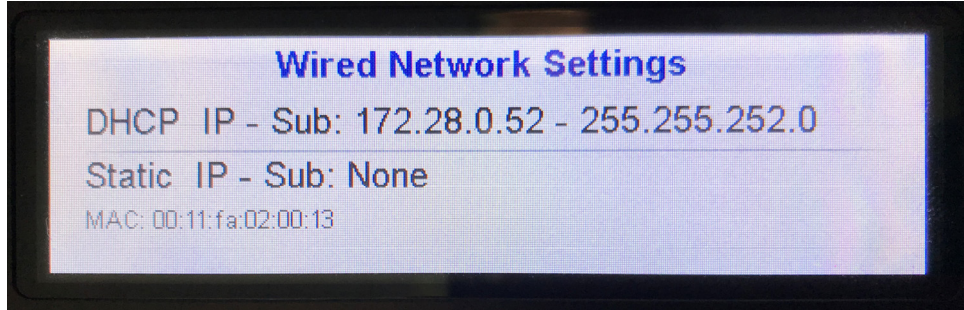

 
3. Open a web browser (on the computer that is connected to the same router/switch from step 1) and type in the following IP address: **http://172.28.0.52**.



4. On the **Master Outputs** web page, press the **Login** button.

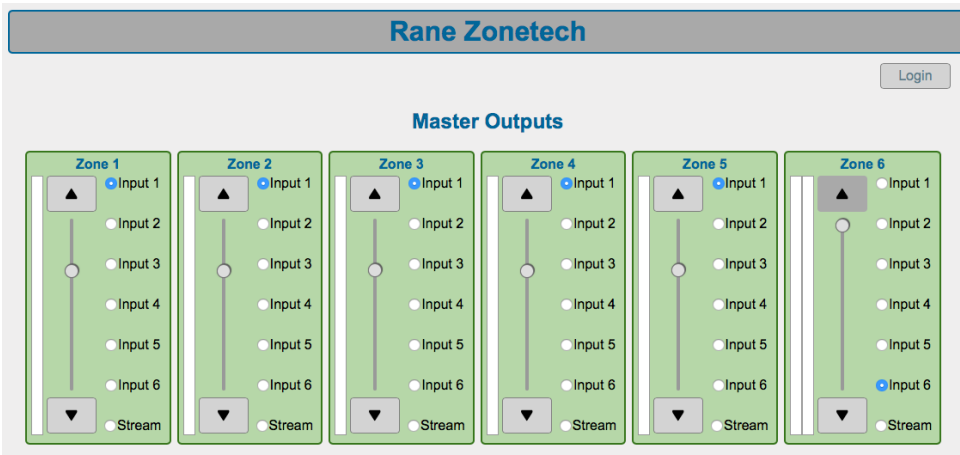

5. At the Login prompt, type the default password **admin** and press the Login button.

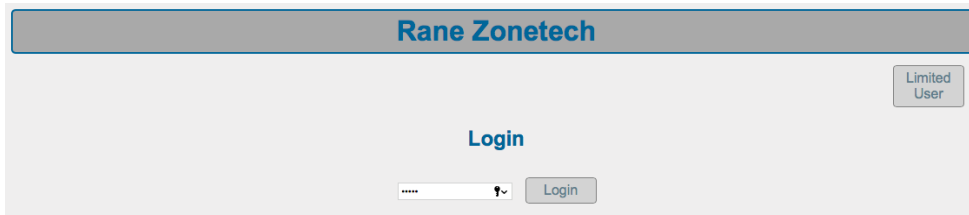



6. Press the **Settings** button to go to the settings page. Click the download icon under the **Firmware Update** section and select the **Zonotech_Firmware_Version_1.1.0.053.rbin** file.

IMPORTANT: During the update process, **do not** power off Zonotech or disconnect it from the power outlet. Doing so can damage the unit.

Rane Zonotech

Input 1 Input 2 Input 3 Input 4 Input 5 Input 6 Stream Page Logout

Zone 1 Zone 2 Zone 3 Zone 4 Zone 5 Zone 6 Master

Naming Settings

Settings

Device Information
Firmware Version: 1.0.0.45 Serial Number: EP00004

Wired Network Settings
DHCP IP: 172.28.0.52 Sub: 255.255.252.0
Static IP: enter address Sub: 255.255.255.0 Apply
MAC: 00:11:fa:02:00:13

Wireless Network Settings
Enable:
SSID: Password: Status: Disconnected
DHCP IP: Sub:
Static IP: Sub: Apply
MAC: 00:90:4c:11:22:33

Security Levels
Web interface passwords:
Full Access: admin Front panel security level:
Limited Access: enter password Full Access
When a password is empty, users will automatically be logged in at that level View-only Access
 Limited Access

Configuration
Save settings from device
Click/Tap or Drop settings file here Send settings to device

Firmware Update
Click/Tap or Drop settings file here Update firmware

7. Press the **Update firmware** button to start the update.

Rane Zonotech

Input 1 Input 2 Input 3 Input 4 Input 5 Input 6 Stream Page Logout

Zone 1 Zone 2 Zone 3 Zone 4 Zone 5 Zone 6 Master

Naming Settings

Settings

Device Information
Firmware Version: 1.0.0.45 Serial Number: EP00004

Wired Network Settings
DHCP IP: 172.28.0.52 Sub: 255.255.252.0
Static IP: enter address Sub: 255.255.255.0 Apply
MAC: 00:11:fa:02:00:13

Wireless Network Settings
Enable:
SSID: Password: Status: Disconnected
DHCP IP: Sub:
Static IP: Sub: Apply
MAC: 00:90:4c:11:22:33


Security Levels
Web interface passwords:
Full Access: admin Front panel security level:
Limited Access: enter password Full Access
When a password is empty, users will automatically be logged in at that level View-only Access
 Limited Access

Configuration
Save settings from device
Click/Tap or Drop settings file here Send settings to device

Firmware Update
Zonotech_Firmware_Version_1.1.0.053.rbin Update firmware



8. The firmware update progress will be shown on the web page and on Zonetech's display.

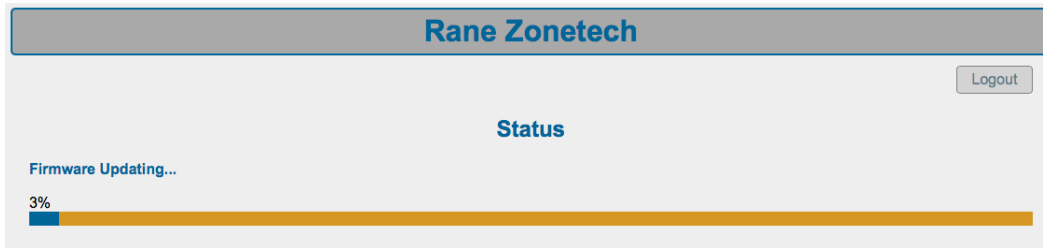

9. Once the update reaches 100%, Zonetech will automatically reboot with the new firmware installed.

Technical Support

For additional help, visit ranecommercial.com/support.